

IR-116

Installation instructions



A



4

B



 
1

C



4

D



4

E



1

